



iFLOOR Y2 SERIES

Cordless Floor Washer

Operating instructions


Instruction Manual

User Manual

Instructions for use

Instruction Manual

Manual

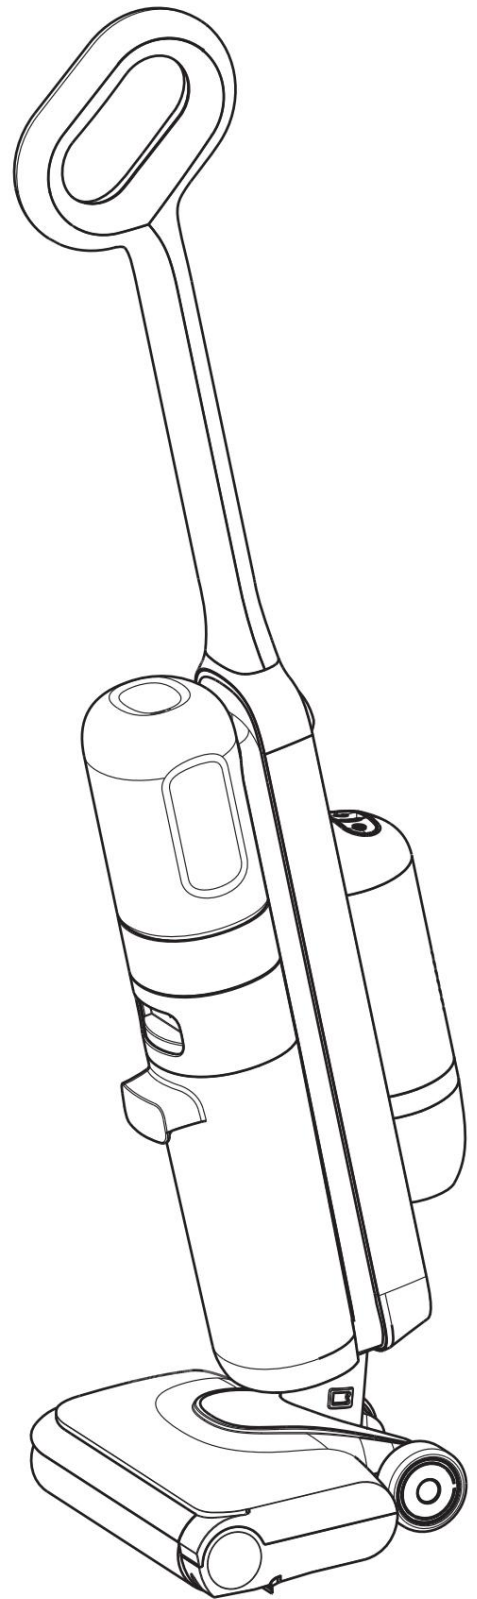

*Actual product may differ from illustration.

TINECO IS HERE TO HELP.
We'll get back to you within 24 hours.



www.tineco.com

SUMMARY

Important Safety Instructions	56
Specifications	61
Presentation	62
Accessories	63
Assemblage	64
Operation	65
Maintenance	68
Troubleshooting Guide	71
Warranty	72



OTHER LANGUAGES

ARE AVAILABLE ON OUR OFFICIAL WEBSITE



TINECO IS HERE TO HELP YOU.



Important Safety Instructions

SAVE THESE INSTRUCTIONS

For domestic use only.

When using an electrical appliance, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow safety precautions and instructions may result in electric shock, fire, and/or serious injury.

WARNING – To reduce the risk of fire, electric shock, electrical or bodily injury:

1. This appliance can be used by children aged 8 years and over and by persons with reduced physical, sensory or mental capabilities, or by persons lacking experience or knowledge, if they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not play with this appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they have been given supervision or instruction.
3. Make sure to only use the device indoors, on floors free from carpet, e.g. vinyl, tile, parquet, etc. Be careful not to run over loose objects or carpet edges. Blockage of the brush can lead to premature belt failure.
4. This device is not to be used as a toy. Special attention is required when the vacuum cleaner is used near children, pets or plants.
5. Use the appliance only as described in this manual. Use only accessories recommended by the manufacturer.
6. Do not use the appliance if its power cord or plug is damaged. If the device has been dropped, damaged, left outdoors or in contact with water, or is not working properly, return it to a service center.
7. Do not handle the charger, including the charger plug and/or terminals, wet hands.
8. Do not insert any object into any opening. Do not use the appliance if any of the openings are blocked. Be careful to avoid the accumulation in the openings of anything that could reduce airflow (dust, lint, hair, etc.).
9. Keep hair, loose clothing, fingers and other body parts away from openings and moving parts.
10. Be especially careful when vacuuming stairs.
11. Do not use this appliance to pick up combustible or flammable liquids, such as gasoline, or vacuum in a room where such liquids are present.

12. Never vacuum anything that is burning or incandescent, such as cigarettes, matches, or hot ashes.
13. Do not operate this appliance without the filter.
14. Avoid accidental switching on. Ensure the on/off switch is in the off position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or plugging it into a power source with the switch on invites accidents.
15. Always turn off the appliance before making any adjustments, changing accessories, or storing the appliance. These safety measures help reduce the risk of starting the appliance accidentally.
16. Only recharge the device with the charger specified by Tineco. A charger suitable for only one type of battery may present a risk of fire if used with a different battery.
17. If the battery is subjected to abusive conditions, liquid may leak from it. Avoid contact with this liquid. In case of accidental contact, rinse thoroughly with water. If liquid gets into your eyes, seek medical attention. Liquid leaking from the battery may cause irritation or burns.
18. Do not use the device if the battery or the device itself is damaged or modified. Modified or damaged batteries may cause unpredictable behavior, resulting in fire, explosion, or risk of injury.
19. Do not expose the battery or device to flames or high temperature excessive. Exposure to fire or temperatures above 130°C may cause an explosion.
20. Follow all charging instructions. Do not charge the battery or device when the ambient temperature is outside the range specified in the instructions. Improper charging or charging a battery in temperatures outside the specified range may damage the battery and increase the risk of fire.
21. Have your appliance repaired by a qualified repairer who should only use identical replacement parts. This will ensure safe use of the appliance.
22. This device contains non-replaceable battery cells. Do not modify
Do not attempt to repair the device or battery without following the use and maintenance instructions.
23. Always turn off this appliance before connecting or disconnecting the tip. motorized.
24. Do not charge or store the device outdoors or inside a car.
Charge, store, or use the battery only in a dry indoor area where the temperature is above 4°C but below 40°C. The charger is designed for indoor use only.
25. Do not use the device to pick up ultra-fine particles such as lime, cement, sawdust, gypsum powder or ash.
26. Do not use the device to pick up sharp objects, such as nails. metal, pieces of glass, metal paper clips or pins.
27. Do not use the device to pick up hazardous materials and chemicals, such as solvents, drain cleaners, strong acids or strong alkalis.

28. Stop using the device immediately if it overheats, makes noises unusual, bad odors, low suction or electrical leakage.
29. Turn off the cleaner and unplug it from the electrical outlet before storing it for a long period of time.
30. Always clean the dirty water tank after each use to avoid blockages, which can lead to low suction power, motor overheating and reduced appliance life.
31. After use, store the appliance indoors, away from moisture.
32. Do not place or immerse the appliance in standing water and do not attempt to clean up flooded areas.
33. All technical data and instructions in this manual are based on the results of laboratory tests carried out by Tineco or designated third parties. The company reserves all rights for final explanations.
34. The plug must be removed from the socket before any cleaning or maintenance of the appliance.
35. An accident may occur if the appliance runs over the power cord.
36. Do not use the appliance if the surface to be cleaned is covered by more than 5 mm of water.
37. Do not pull or carry appliance by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not roll appliance on cord. Keep cord away from heated surfaces.
38. Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord.

Applications

1. This cordless floor cleaner should be used on indoor hard floors, such as vinyl, tile, parquet, etc. Using on rough surface may not achieve the best performance.
2. Keep your device away from heat sources, such as fireplaces or heaters, to avoid deformation of the casing.
3. Do not use the device to pick up flammable or combustible liquids, ultra-fine particles, sharp objects, hazardous materials, chemicals or any other burning or smoking product, as described above.

About the cleaning solution

1. A large amount of cleaning solution entering the motor may damage the unit.
2. Add the solution as directed in the Operation section. We recommend We recommend using the provided cleaning solution. Do not use the product with acidic, alkaline solutions, or any substances harmful to the environment.
3. Keep out of reach of children. If the solution gets into the eyes, rinse immediately with clean water. If the solution is accidentally swallowed, consult a doctor immediately.
4. Disposal of dirty water and solution must comply with local environmental regulations.

About the device

1. Do not modify or attempt to repair the device except as instructed in the operating and cleaning instructions.
2. Charge the device with the Tineco adapter. Input voltage: 100 - 240 V AC High and low voltages may damage the adapter, the device or even cause danger to the user.
3. Be especially careful when vacuuming stairs.
4. Check that the on/off switch is in the off position before entering the appliance or carry it. Do not place the appliance horizontally or tilt it to prevent dirty water from entering the motor.
5. To avoid any tripping hazard, please store the device on the docking station. recharge.
6. Always install the dirty water tank and clean water tank correctly before use.
7. Be careful not to get the device or charger wet to avoid the risk of fire or injury caused by a short circuit.

Recycling instructions in accordance with the Battery Act



Rechargeable batteries contain environmentally harmful materials. They must therefore be removed from the device before disposal. The device must be turned off before removing the rechargeable batteries.

Batteries and rechargeable batteries must not be disposed of with household waste! Every consumer is obliged to hand over all batteries and rechargeable batteries, whether or not they contain harmful substances, to a collection point in their municipality/district or to a retailer, so that they can be disposed of in an environmentally friendly manner. Batteries and rechargeable batteries must only be returned when they are discharged.

Rechargeable batteries and batteries have the symbol shown on the left.

WEEE recycling instructions



Waste electrical and electronic equipment must not be disposed of with household waste! Every consumer is required to hand over all devices at the end of their useful life to a collection point in their municipality/district or to a retailer so that they can be disposed of properly and in an environmentally friendly manner.

The illustration on the left shows the hopper symbol indicating the separate collection of waste electrical and electronic equipment (WEEE).

For EU countries only:

We hereby declare that this product complies with the essential requirements of all applicable directives and regulations within the European Community. The Declaration of Conformity (DoC) can be obtained from our website.

Visit <https://global.tineco.com/compliance/>

Your statement will be downloaded in PDF format.

Symbols:

	Read the instruction manual
	Class II
	Short-circuit resistant safety isolating transformer
	Switching power supply
	This device is designed for indoor use only
	Direct current
	Alternating current

FR


Specifications

Product	iFLOOR Y2 Series
AC input	100-240 V~
Tension	25.2V Li-ion battery of 2 500 mAh
Power supply	140 W
Autonomy	about 30 minutes
Charging time	5 hours
Water flow	15 to 100 ml/min.
REP capacity	1,0ÿL
RES capacity	0,8 L
Waterproofing	IPX4

FR

Presentation

Note: Please refer to the purchase link for product accessories and specifications.

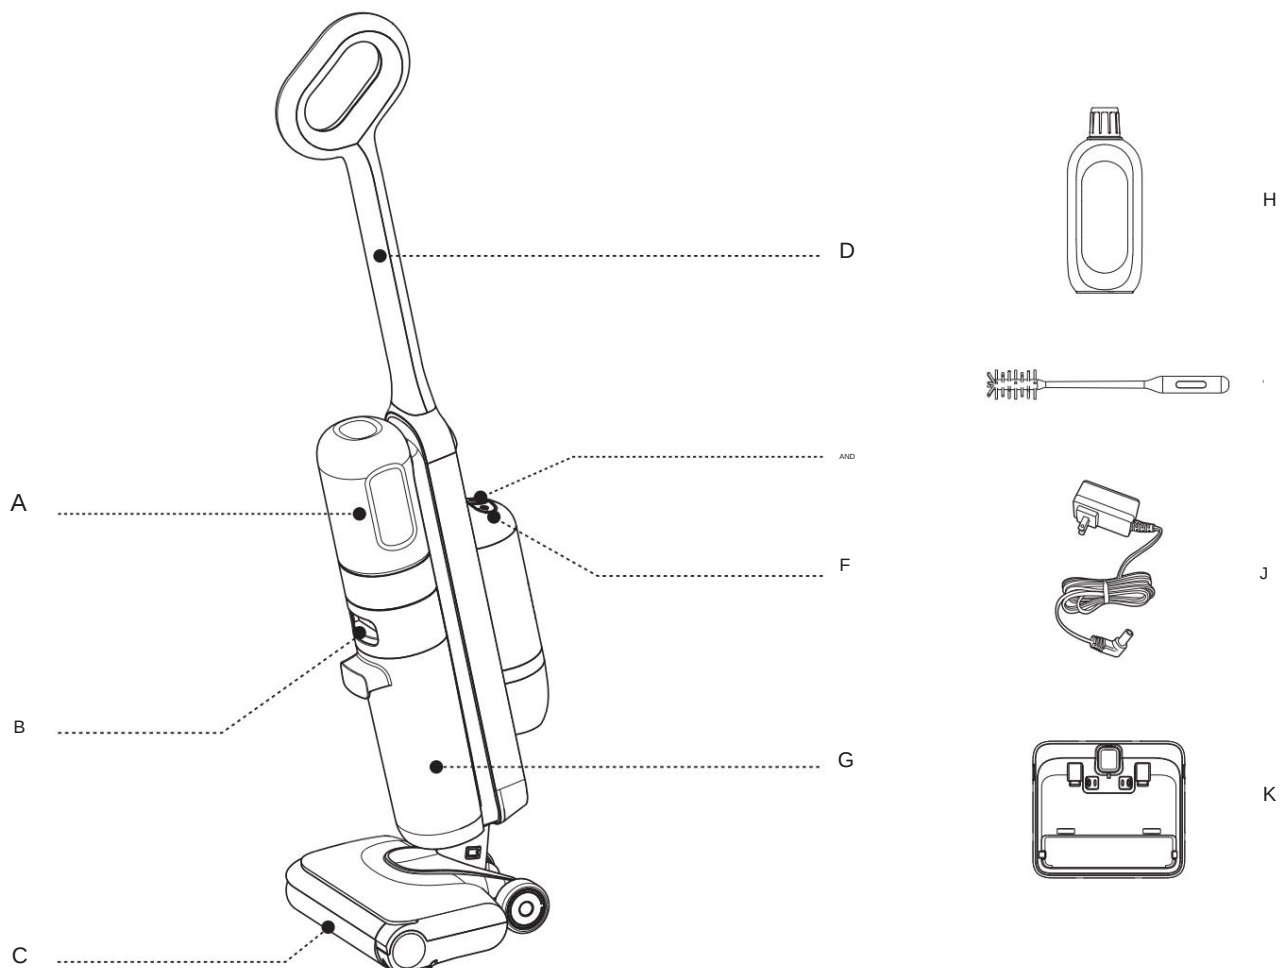

A. Clean water tank (CWT)

B. Unlocking the dirty water tank

C. Brush roller

D. Tube

E. Auto-clean button

F. On/off button

G. Dirty Water Tank (RES)

H. Cleaning and degreasing solution
deodorization

I. Cleaning tool

 
J. Adapter

K. Charging station

Accessories

Noticed :

Accessories may vary by market. If you need more accessories, please visit www.tineco.com or store.tineco.com.



Cleaning and deodorizing solution

Removes dirt, grease and tough stains from most types of hard surfaces, such as tile, marble, parquet, etc.

Always use Tineco solution with your device.


Add one capful of solution bottle to the water tank own.



Brush roller

The soft bristle roller can be used for vacuuming and washing at the same time. It can be easily cleaned using the automatic cleaning function.

* Replace every 6~8 months.

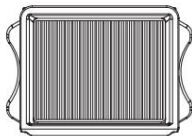

Dry filter

The dry filter and filter net can block large particles and debris, ensuring the durability of the device.

* Please install the dry filter before use, otherwise it may weaken the suction power.

* Replace every 6 months.



Cleaning tool


A complete brush for cleaning the RES, brush compartment, and opening. The tool also features a bristle end to remove dirt and mud from the roller and in the RES.

Assemblage


How to assemble/disassemble the device

Noticed :

For the water tank and brush assembly, refer to the "Operation" and "Maintenance" sections.

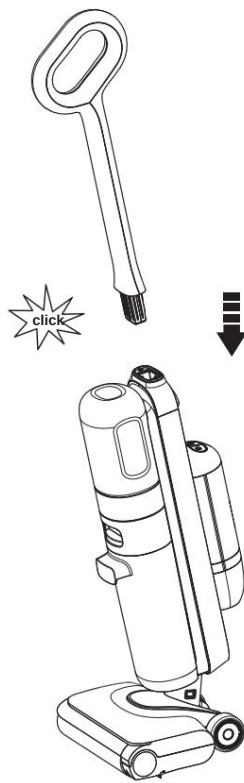

To secure the handle, insert it into the device until you hear a click.

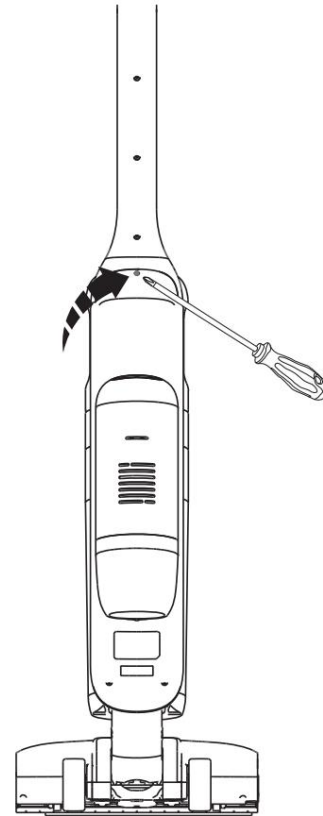


In case the handle needs to be removed, press the spring to release the handle using a tool (e.g. screwdriver) and lift the handle from the device.

Functioning


Preparation for use

Before first use, please charge the device for approximately 5 hours (refer to the "Charging Instructions" section for details).

*Based on Tineco laboratory test results. Laboratory temperature 4°C to 40°C.

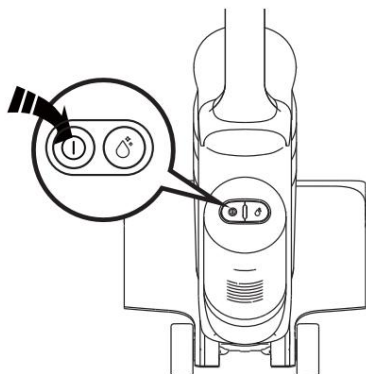


Press the button to start the device in the default mode. Press this button again to turn off the device.

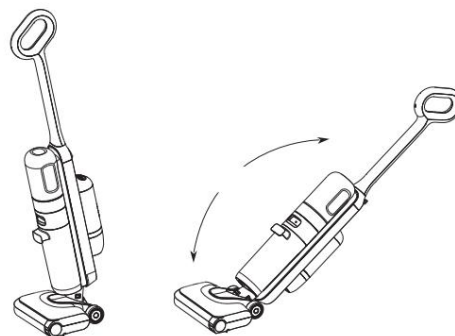

Stop working Resume working

The unit will stop working in the upright position and will start working again when you tilt it.

* Do not tilt it more than 150° to avoid any water leak.

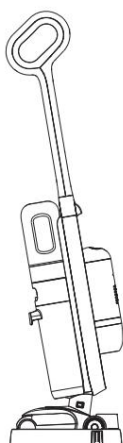


Place the device upright on the charging station after use to charge and ranger.


Noticed :

- Do not vacuum up foamy liquid.
- To vacuum up water on the surface, the device turns off within 3 seconds of switching on hors tension.

Filling the clean water tank

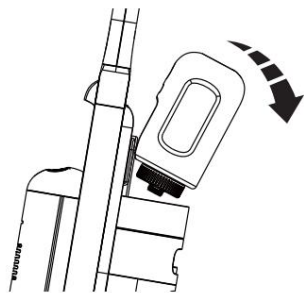

Hold the water tank and lift it up forcefully to remove it.

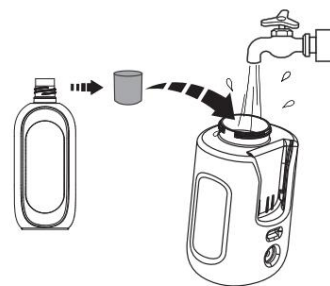


Open the tank cap and fill it with tap water. If a deeper cleaning is needed, add a capful of solution to the REP and close the cap firmly.

Noticed :

Only use water with a temperature below 60°C.


DO NOT USE HOT WATER.

Only the Tineco solution is recommended.

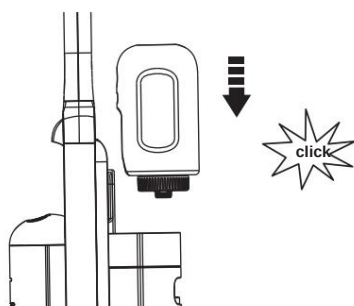

Hold the tank and align the groove on the back of the tank with the corresponding location on the machine body. Press firmly to complete the installation.

Loading Instructions

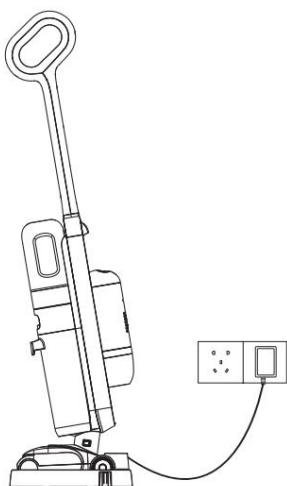

Preparing to charge: Plug the adapter into the power outlet. Plug in the external charging cord to charge the device.

To charge the device, place it on the charging station.

1. To charge the device, plug in the charging cord external to the charging station and plug it into the wall outlet.
2. To avoid tripping hazards, place the device on the charging station near a wall while charging.



Warning :

- Charge the device only with the adapter provided by Tineco.
- During long periods of non-use, the device should be charged once every 3 months for optimal performance. A full charge may take approximately 5 hours.
- Store the device indoors, away from moisture. Do not expose the device to sunlight nor frost. Recommended temperature range: 4°C to 40°C.

Autonomy

- Battery life is approximately 30 minutes. •

Battery life estimates were obtained from a Tineco laboratory.


Charging time

- It takes approximately 5 hours for a full charge. •

Estimated data was obtained by a Tineco laboratory at ambient temperatures between 4°C and 40°C.

Indicator light (applicable to a specific model)

In use

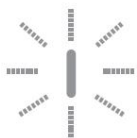

Flashing red: low charge.



Solid blue: Normal mode.




Off: No power or battery malfunction.



Solid red: Brush roller is blocked or dirty water tank is not installed.

During charging

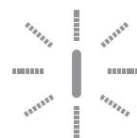

Flashing blue: charging in progress.

100% recharged



5 minutes after the end of charging: solid blue.



After 5 minutes: light off.


Interview

Noticed :

- For optimal performance and to avoid odors, always **clean** and **dry** **completely clean** the RES, float, filters, brush roller and brush roller cover after each use.
- Make sure each part is installed correctly, otherwise the device may not function properly.
- After maintenance, place the device upright on the charging station. Do not expose the device to direct sunlight and store it indoors in a dry place.

FR


Main body

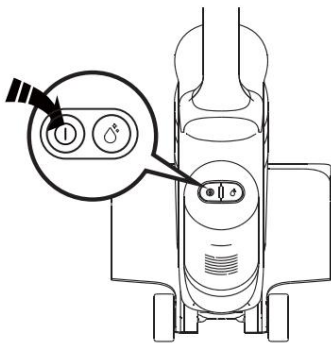

To reduce the risk of injury, turn off the unit before performing maintenance.




Use a cloth to clean the surface with a neutral detergent. The cloth must be dry to prevent water from entering the device.

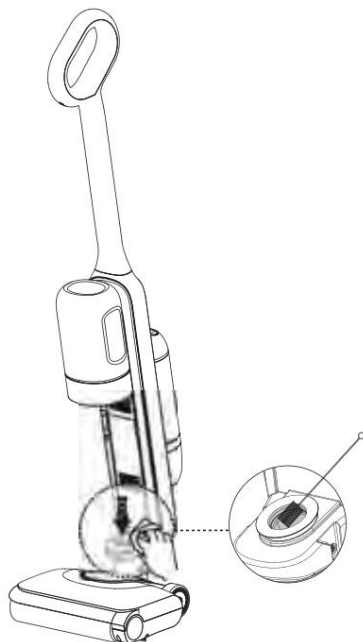


Remove the dirty water tank, clean the dirty water port with a damp cloth or the cleaning tool to prevent it from clogging.

Dirty water tank

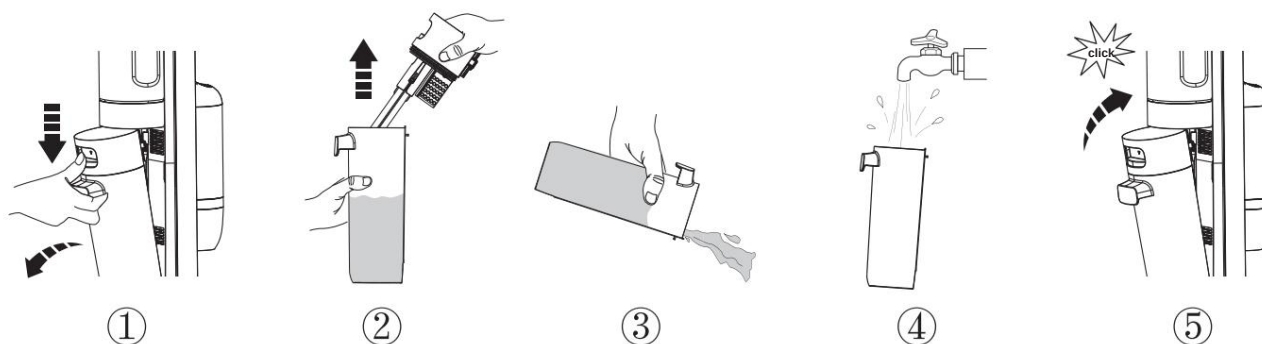


- When the dirty water reaches the Max line, the float blocks the RES and creates a high-pitched sound indicating that it is time to turn off the unit.
- Pull the tank lid upwards to empty the RES. Use the cleaning tool to Remove any remaining debris. Rinse the inside of the RES and replace it in the device.

Dry filter and float

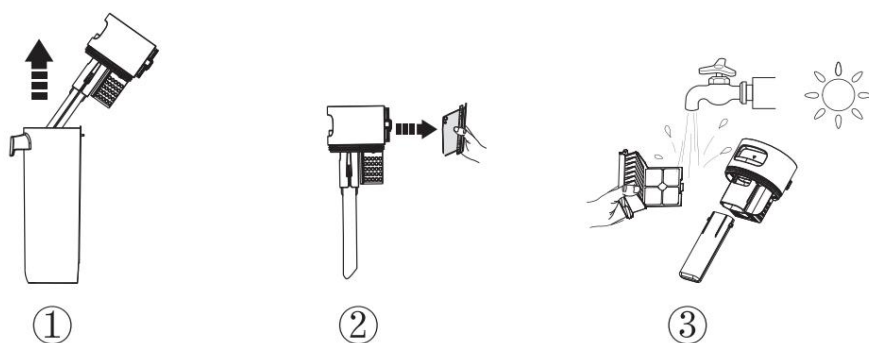

- Grasp the recessed areas on either side of the dry filter and remove it. Then remove the float. Rinse under running water and allow to dry completely before replacing the dry filter in the RES cover.

Automatic brush roller cleaning

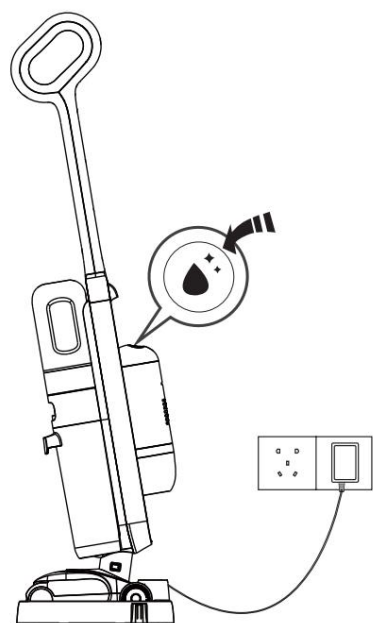


1. Place the device on the charging station after use, then press the auto-clean button to start the process.
2. Once the operation is completed, the device begins to charge.


Noticed :

- Make sure the device is plugged in and the battery is sufficiently charged.
- Before the automatic cleaning cycle, please clean the RES and ensure that the water level in the REP exceeds 40%.

Brush roller

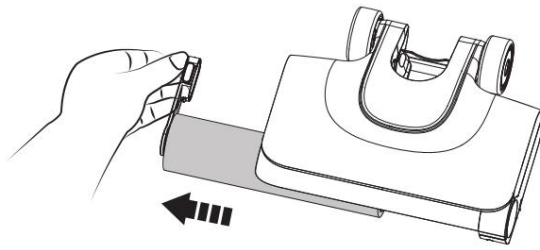


Press and hold the side loop of the brush roll with your fingers, then lift the handle on the left end to remove the brush roll.

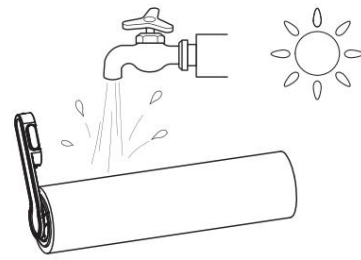


Rinse the brush roller with clean water and remove any tangled hair or debris by hand.

Air dry it thoroughly before putting it back in place.

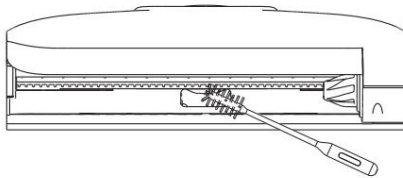

Remove hair and debris from the brush roller compartment and opening using the cleaning tool.

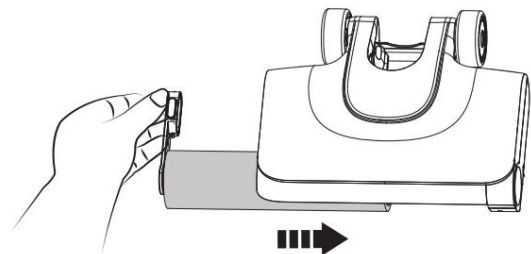

Install the brush roller in place by inserting its end into the right side of the bracket, then lock the tab in place.

Troubleshooting Guide

Issue	Cause possible	Solution
The device does not turn on	Automatic overheat protection	Restart after the device has cooled down
	The dirty water in the RES has reached the MAX line	Empty the dirty water, then reinstall the RES
Low suction	The salt filter is not installed or is dirty	Install the dry filter or clean it and let it dry completely
The device cannot be recharged	Incompatible adapter	Use the original adapter
	The adapter is not plugged in properly	Connect the adapter correctly
The light turns red	The brush roller is blocked	Clear obstructions
	The dirty water in the RES has reached the MAX line	Empty the dirty water, then reinstall the RES
The light is flashing red	Low battery	Charge the device or restart it
Indicator light off during operation	The battery is overheating or not working properly	Let the device cool down and restart it

Noticed :

If the above troubleshooting guide does not provide a solution, please visit our website www.tineco.com for further assistance.

Guarantee

2 YEAR LIMITED WARRANTY

- It only applies to purchases made from authorized Tineco retailers.
- It is subject to compliance with the requirements described in this instruction manual, and is subject to other conditions described below.
- This warranty is governed by and construed in accordance with the laws of the country in which the purchase took place. We provide a 2-year warranty or a warranty period as stipulated by applicable local law, whichever is longer.

WHAT IS COVERED

- Your Tineco appliance comes with a 2-year warranty against original defects in material and workmanship when used for domestic purposes in accordance with the Tineco user manual. Motorized accessories and the battery purchased separately come with a 1-year warranty.
- This warranty provides, at no additional cost, all labor and parts necessary to ensure that your appliance is in good working order during the warranty period.
- This warranty is only valid for use in the country where the device was sold.

WHAT IS NOT COVERED

Tineco will not be liable for any costs, damages or repairs resulting from the following:

- Devices purchased from an unauthorized reseller.
- Careless handling or operation, misuse, abuse and/or lack of maintenance or use not in accordance with the Tineco user manual.
- Use of the appliance other than for normal domestic purposes, i.e., for commercial or rental purposes.
- Use of parts that do not comply with the Tineco user manual.
- Use of parts and accessories other than those produced or recommended by Tineco.
- External factors unrelated to the quality and use of the product, such as weather, modifications, accidents, power outages, power surges or natural disasters.
- Repairs or modifications carried out by unauthorized parties or agents.
- Failure to clean obstructions and other hazardous materials from the appliance.
- Normal wear and tear, including normal wear and tear of parts, such as dustbin, belt, filter, HEPA filter, brush bar, power cord (or where external damage or abuse is diagnosed), carpets or floors damaged due to use not in accordance with the manufacturer's instructions.
- Reduction of battery discharge time due to aging or wear of the battery.

WARRANTY LIMITATIONS


- Any implied warranty relating to your device, including, but not limited to, the warranty of merchantability or the warranty of fitness for a particular purpose, is limited to the duration of this warranty.
- Warranty coverage applies only to the original owner and the battery original and is not transferable.
- This limited warranty gives you specific legal rights. You may also have other rights which vary by region.
- Manufacturer's warranties may not apply in all cases, depending on factors such as the use of the product, where the product was purchased or who you purchased the product from.

Please read the warranty carefully and contact the manufacturer if you have any questions.

SERVICE GUARANTEE

Registration: We strongly recommend that you register your device upon purchase by logging into our official website (www.tineco.com) or scanning the QR code (see right) to benefit from more exclusive benefits. To register, please enter the full serial number (on the back of the device).

Failure to register your device will not diminish your warranty rights.

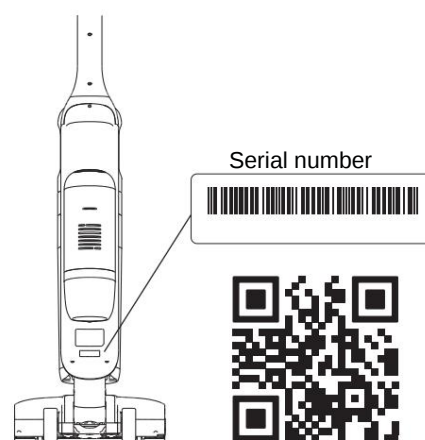

How to make a claim: Please retain your proof of purchase. To make a claim under our limited warranty, you must provide your serial number and the original purchase receipt with the purchase date and order number.

All work will be carried out by Tineco or its approved agencies.
Any defective part replaced will become the property of Tineco.
Service under this warranty will not extend the warranty period.

Visit the Tineco website at
www.tineco.com to benefit from
the expertise of after-sales service.